



Artikel Nr.

SKL0000045FLXST

SKELETTBLÄTTER medium - on brown Flexi

Nature is the best designer - which is shown by the delicate leaves of this surface. Real, skeletonized big rubber tree leaves create a natural sense of lightness in your interior design. Through being loosely spread on contrasting brown Flexi, the intricate structure of the skeleton leaves becomes the focal point.

- the delicate and intricate structure of this surface makes for an exquisite statement in your interior design
- the dark brown Flexi creates a striking contrast, making the intricate structure of the leaves more visible
- the translucent surface with loosely spread leaves in a natural off-white creates a sense of harmony and lightness

Delicate skeleton leaves in medium coverage (approx.70/m²), hand-picked, on brown Flexi - creating a striking contrast. Available on Flexi and Flexi self-adhesive.

Characteristics


Raw material	DELICATE SKELETONIZED RUBBER TREE LEAVES
Scent	○ ○ ○
Light fastness	● ● ●
Abrasion resistance	● ● ●
Vibrancy	● ● ○

Technical details


Backing	Flexi
Format	2.950 x 1.360 mm
MOQ	1 sheet (4,012 m ²)
Weight	170 g/m ²
Thickness	0,2 mm
Flexibility	Bending radii up to 0,5 mm
Translucency	opaque

Material details

Wallpapering technique Do not apply glue to the back of the wallpaper, but to the surface. Please note our glue recommendations.

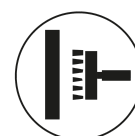

Overlap and double-cut Each panel overlaps approx. 2 cm with the one next to it. Please note the edge tolerance.

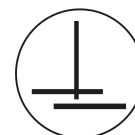

Processing

Wallpaper

Installation of Organoid natural surfaces on Flexi as a wallpaper:

- Wall-pasting technique
- Pay attention to Organoid glue recommendations
- Double cut: Each panel overlaps with the one next to it (approx. 2 cm)
- Cut with scissors, cutter or plotter
- Pre-trials recommended
- In the case of wallpapers, the effect is to be checked after processing three strips. Claims that go beyond the replacement of defective goods will not be accepted.

To Installation

wood workers

Installation of Organoid natural surfaces on Flexi in woodworking:

- Process with normal wood-working machinery
- Glue (e.g. white glue) is applied onto the wooden materials, as the fleece absorbs moisture and glue stains may appear on the front if glue is applied to the fleece
- Cover the natural surface with the enclosed separating paper
- pressing temperature. 60°C
- For sensitive wood-working applications, use a counter-balance (enclosed on request)
- Cut with scissors, cutter or plotter
- Pre-trials recommended

To Installation

Inspiration



Organoid Technologies GmbH

6500 Fließ

Nesselgarten 422

www.organoids.com

info@organoids.com

Tel. [+43 5449 200 01](tel:+43544920001)

22.5.2024